

Install Instructions

PRP Door Bags for 25+ Polaris RZR PRO XP, PRO S, PRO R



These instructions cover both the Upper and Lower Door Bags for the Maverick R

Read through all of the instructions completely before beginning the install.

Parts Included:

A. Door Bags (Front or Rear)

B. Hardware

6 x Push Pins (Front or Rear)

Remove all parts from the bags and lay out the pieces.

Tools Needed: (not included)

T40 Socket

1/4" Drill Bit

Drill

Flat Head Screw Driver / Push Pin Puller

Thumbs

Time:

Approx 45 Minutes.



Front Door Bags Install (Pair)

1. Remove the Door Skin Push Pins

Start by removing the outside door skins on the stock RZR PRO Doors. Remove the (3) 2-stage plastic push pins on the rear edge of the door. Then remove the (1) push pin located on the front edge of the door at the top.

You can use a push pin remover tool to make this easier (Or a flat nose screwdriver)




2. Remove the Door Skin Torx Bolts

Next use a T40 Socket to remove the (2) Torx Bolts located on the bottom of the door. Then the (2) torx bolt in the middle of the door underneath the armrest.



3. Remove the Door Skin


Then start to pull the door skin off. Its easiest to start at the back corner, and pull the top of the panel up & out. There are several hook&loop patches that will come apart on top of the door. Once the panel is removed, set it aside.

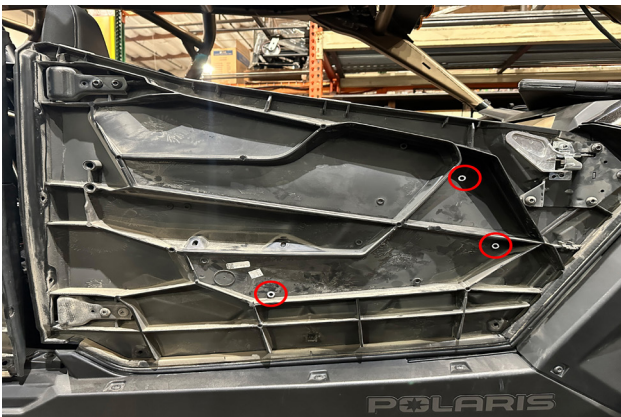

4. Locate Drill Locations on the Door

Once you have the skin off, you can see the internal plastics on the door. Locate the (3) plastic circle rivets located on the OEM door. (see picture for locations).

These are the (3) locations that you are going to drill out.

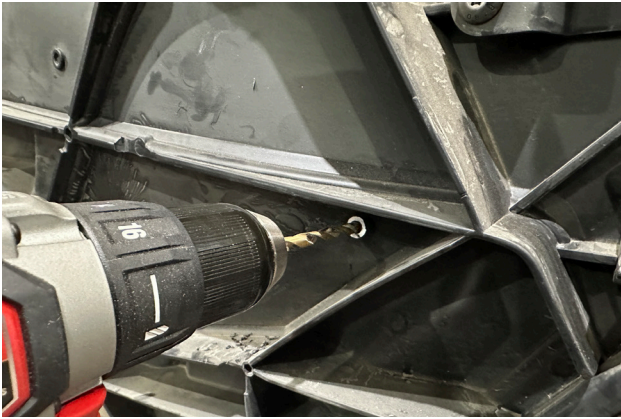

5. Drill out the Hole in the Doors

Use a 1/4" drill bit to create a hole in this location. Just place the bit in the center of that circle, and drill through so that the hole placement exactly matches the PRP Bag.

Drill out all (3) holes per door as shown in the image on Step 4.



6. Line Up Door Bags

Take the Driver or Passenger side door bag and line it up on the door.

In the front pocket of the door bag there is foam inside for the knee pad. Open the zipper, and pull out that foam piece so that you can install the push pins.



7. Install Top Push Pin

Take one of the PRP supplied push pins, and push it through the top hole in the bag so that it pops out the back.

Then put the pin into the cut hole and push tight until the pin is inserted all the way.



8. Install the Middle and Rear Push Pins

Do the same for the middle and rear push pins. Open the pockets, push the pin through the back of the bag, and then all the way into the hole in the door until it is secure.

Note - the middle push pin is at a slight angle, so it might not push down completely.



9. Re-Install the Door Skin Push Pins

Place the Door Skin back on, and make sure it is lined up properly. Re-install the (3) push pins at the rear of the door, then the (1) push pin at the front corner of the door.



10. Re-Install the Door Skin Bottom Torx Bolts

Use a T40 to re-install the (2) torx bolts back into the bottom of the door.



11. Install Torx Bolts Through Bag

Take the last (2) torx bolts and run them through the two holes in the top of the bag. Then line them up with the bolt holes in the door, and tighten them down with a T40.

Note - do not overtighten to the point that it twists the material of the bags. You may just need to loosen the bolts a bit, fix the bag, and re-tighten the bolts.



12. Put Foam Cushion Back In (Optional)

You can take the foam piece, squish it down and stuff it back into the top pocket. Just make sure the foam shape matches the shape of the pocket. This foam will protect your knee's from hitting the door while bouncing around.

Or if you want, you can keep this foam piece out, and use the top pocket for more storage space.



13. Repeat Steps 1-12 on the Other Door

Follow the same steps to install the bag on the other side of the vehicle.

And then you're all done with the fronts!



Rear Door Bag Install (Pair)

14. Remove the Door Skin Push Pins

Start by removing the outside door skins on the stock RZR PRO Doors. Remove the (3) 2-stage plastic push pins on the front edge of the door.

You can use a push pin remover tool to make this easier (Or a flat nose screwdriver)



15. Remove the Door Skin Push Pins (Cont.)

Then remove the (3) push pin located on the bottom edge of the door.



16. Remove the Door Skin Push Pins (Cont.)

Then remove the (2) push pin located on the bottom edge of the door.




17. Remove the Door Skin Torx Bolts

Next use a T40 Socket to remove the (1) torx bolt in the middle of the door underneath the armrest.



18. Remove the Door Skin


Then start to pull the door skin off. Its easiest to start at the front corner, and pull the top of the panel up & out. There are several hook&loop patches that will come apart on top of the door. Once the panel is removed, set it aside.

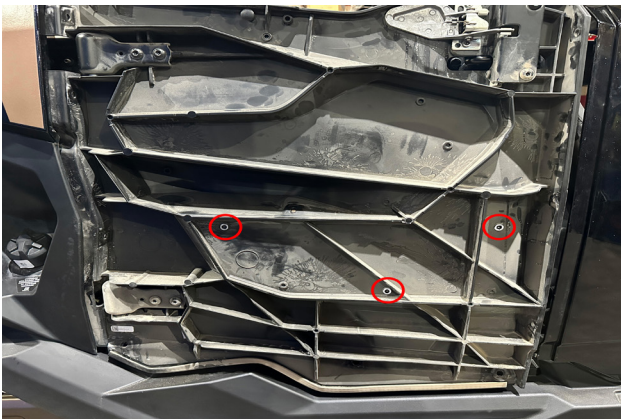

19. Locate Drill Locations on the Door

Once you have the skin off, you can see the internal plastics on the door. Locate the (3) plastic circle rivets located on the OEM door. (see picture for locations).

These are the (3) locations that you are going to drill out.

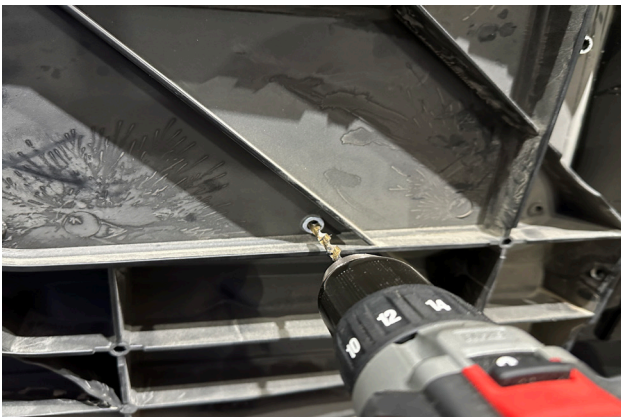

20. Drill out Doors

Use a 1/4" drill bit to create a hole in this location. Just place the bit in the center of that circle, and drill through so that the hole placement exacty matches the PRP Bag.

Drill out all (3) holes per door as shown in the image on Step 20.



21. Line Up Door Bags

Take the Driver or Passenger side door bag and line it up on the door.

In the front pocket of the door bag there is foam inside for the knee pad. Open the zipper, and pull out that foam piece so that you can install the push pins.



22. Install Top Push Pin

Take one of the PRP supplied push pins, and push it through the top hole in the bag so that it pops out the back.

Then put the pin into the cut hole and push tight until the pin is inserted all the way.



23. Install the Middle and Rear Push Pins

Do the same for the middle and rear push pins. Open the pockets, push the pin through the back of the bag, and then all the way into the holes in the door until it is secure.



24. Re-Install the Door Skin Push Pins

Place the Door Skin back on, and make sure it is lined up properly. Re-install the (3) push pins at the front of the door, the (3) push pins on the bottom of the door, then the (2) push pins at the rear of the door.



25. Install Torx Bolts Through Bag

Take the torx bolts and run it through the hole in the top of the bag. Then line the bolt up with the bolt hole in the door, and tighten it down with a T40.

Note - do not overtighten to the point that it twists the material of the bag. You may just need to loosen the bolt a bit, fix the bag, and re-tighten the bolt.



26. Put Foam Cushion Back In (Optional)

You can take the foam piece, squish it down and stuff it back into the top pocket. Just make sure the foam shape matches the shape of the pocket. This foam will protect your knee's from hitting the door while bouncing around.

Or if you want, you can keep this foam piece out, and use the top pocket for more storage space.



27. Repeat Steps 13-26 on the Other Door

Follow the same steps to install the bag on the other side of the vehicle.



28. And you're all set!

If you have any questions or experience issues, please contact your retail outlet first for assistance. However, the staff at PRP is always happy to help at **1-800-317-6253**, or email **customerservice@prpseats.com**

Thank you! Ride Safe!



13. Drill out Doors

Use a 1/4" drill bit to create a hole in this location. Just place the bit in the center of that circle, and drill through so that the hole placement exactly matches the PRP Bag.

Drill out all (3) holes per door as shown in the image on Step 4.



6. And you're all set!

If you have any questions or experience issues, please contact your retail outlet first for assistance. However, the staff at PRP is always happy to help at **1-800-317-6253**, or email **customerservice@prpseats.com**

Thank you! Ride Safe!